


FC-F119 PUSH/PULL LATCH FOR RIGHT MOUNTING TEMPLATE

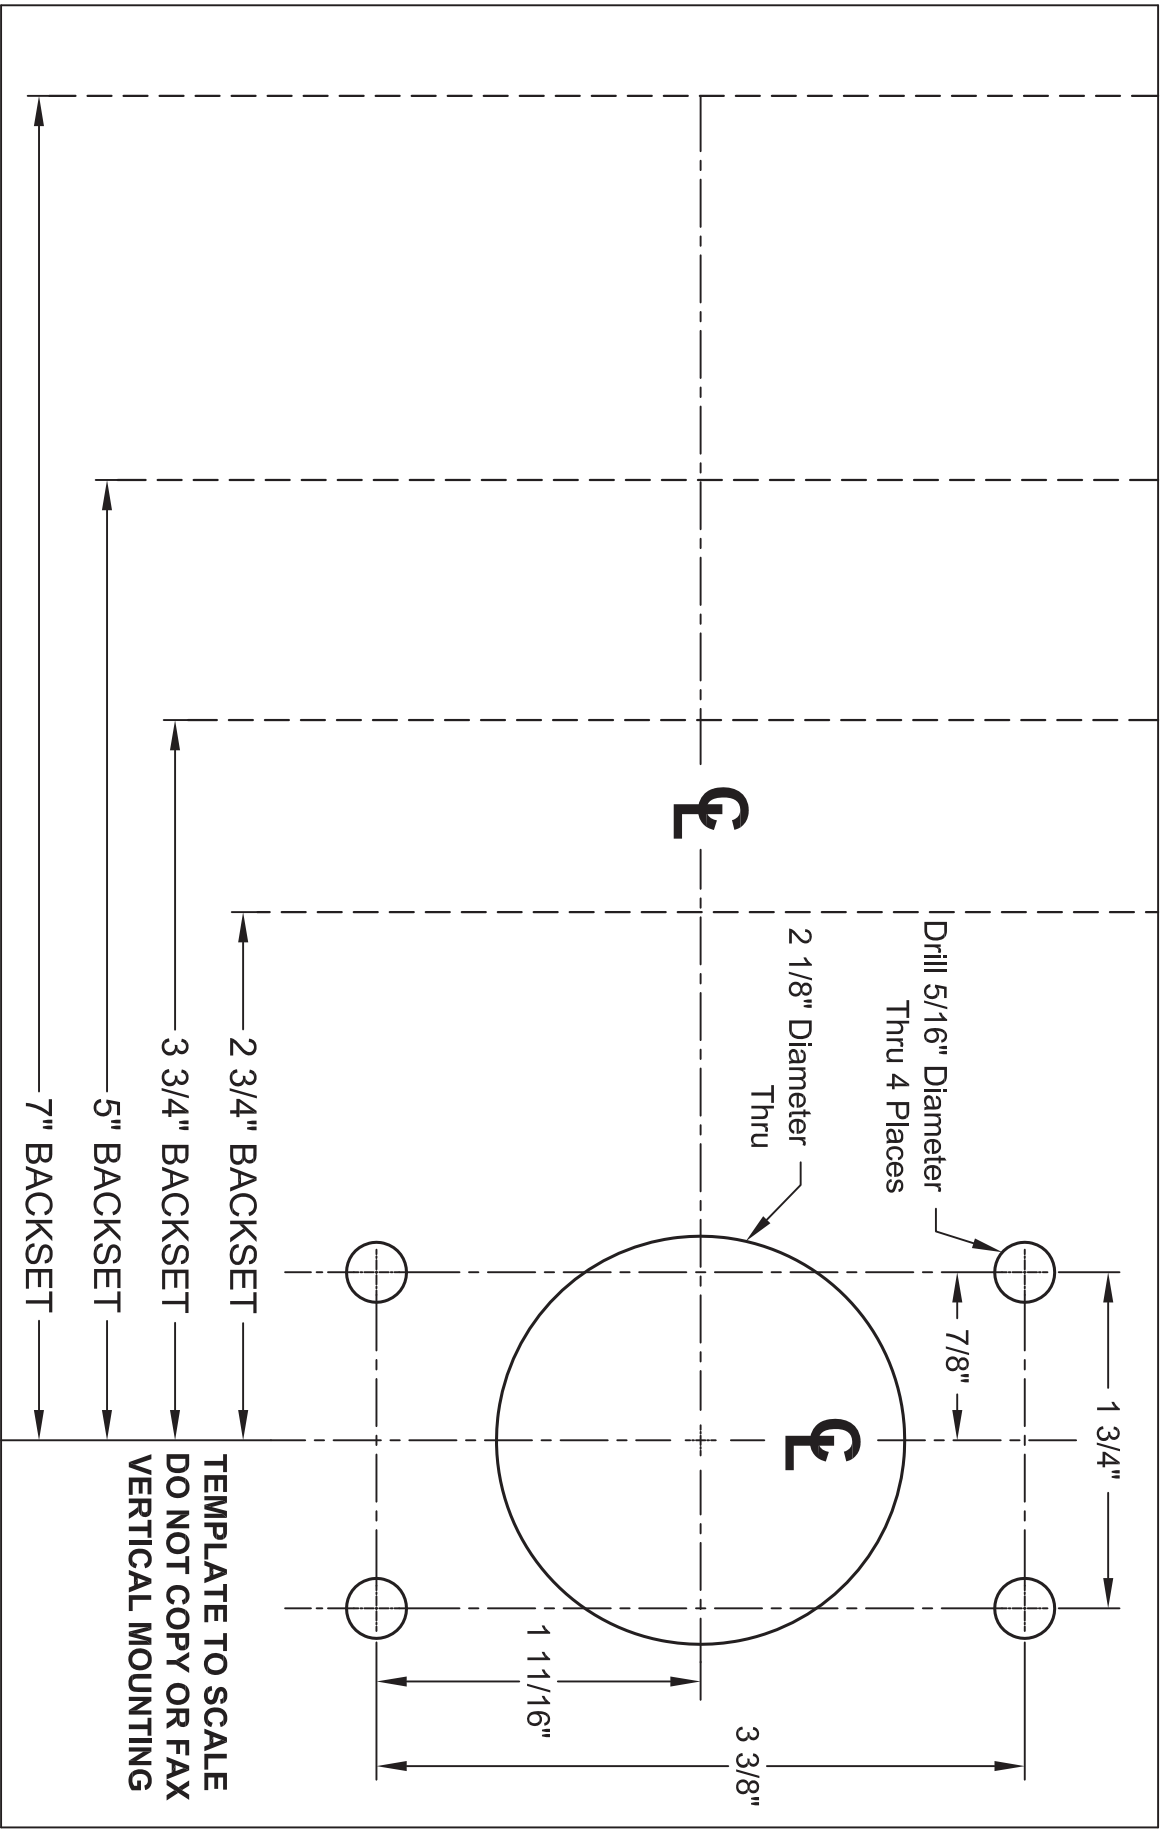

1. Select required backset 2-3/4", 3-3/4", 5", 7".
2. Fold on dashed line.
3. Place fold on low edge of bevel.
4. Line up center lines.
5. Center punch all holes.
6. Drill holes. (For hollow metal doors, do not drill thru center punch & drill holes from both sides of door.)

ATTENTION: If smoke seal, weather stripping, acoustical material or silencers are used on the or frame, be sure that they do not interfere with the ease in which the latch bolt enters the strike.