


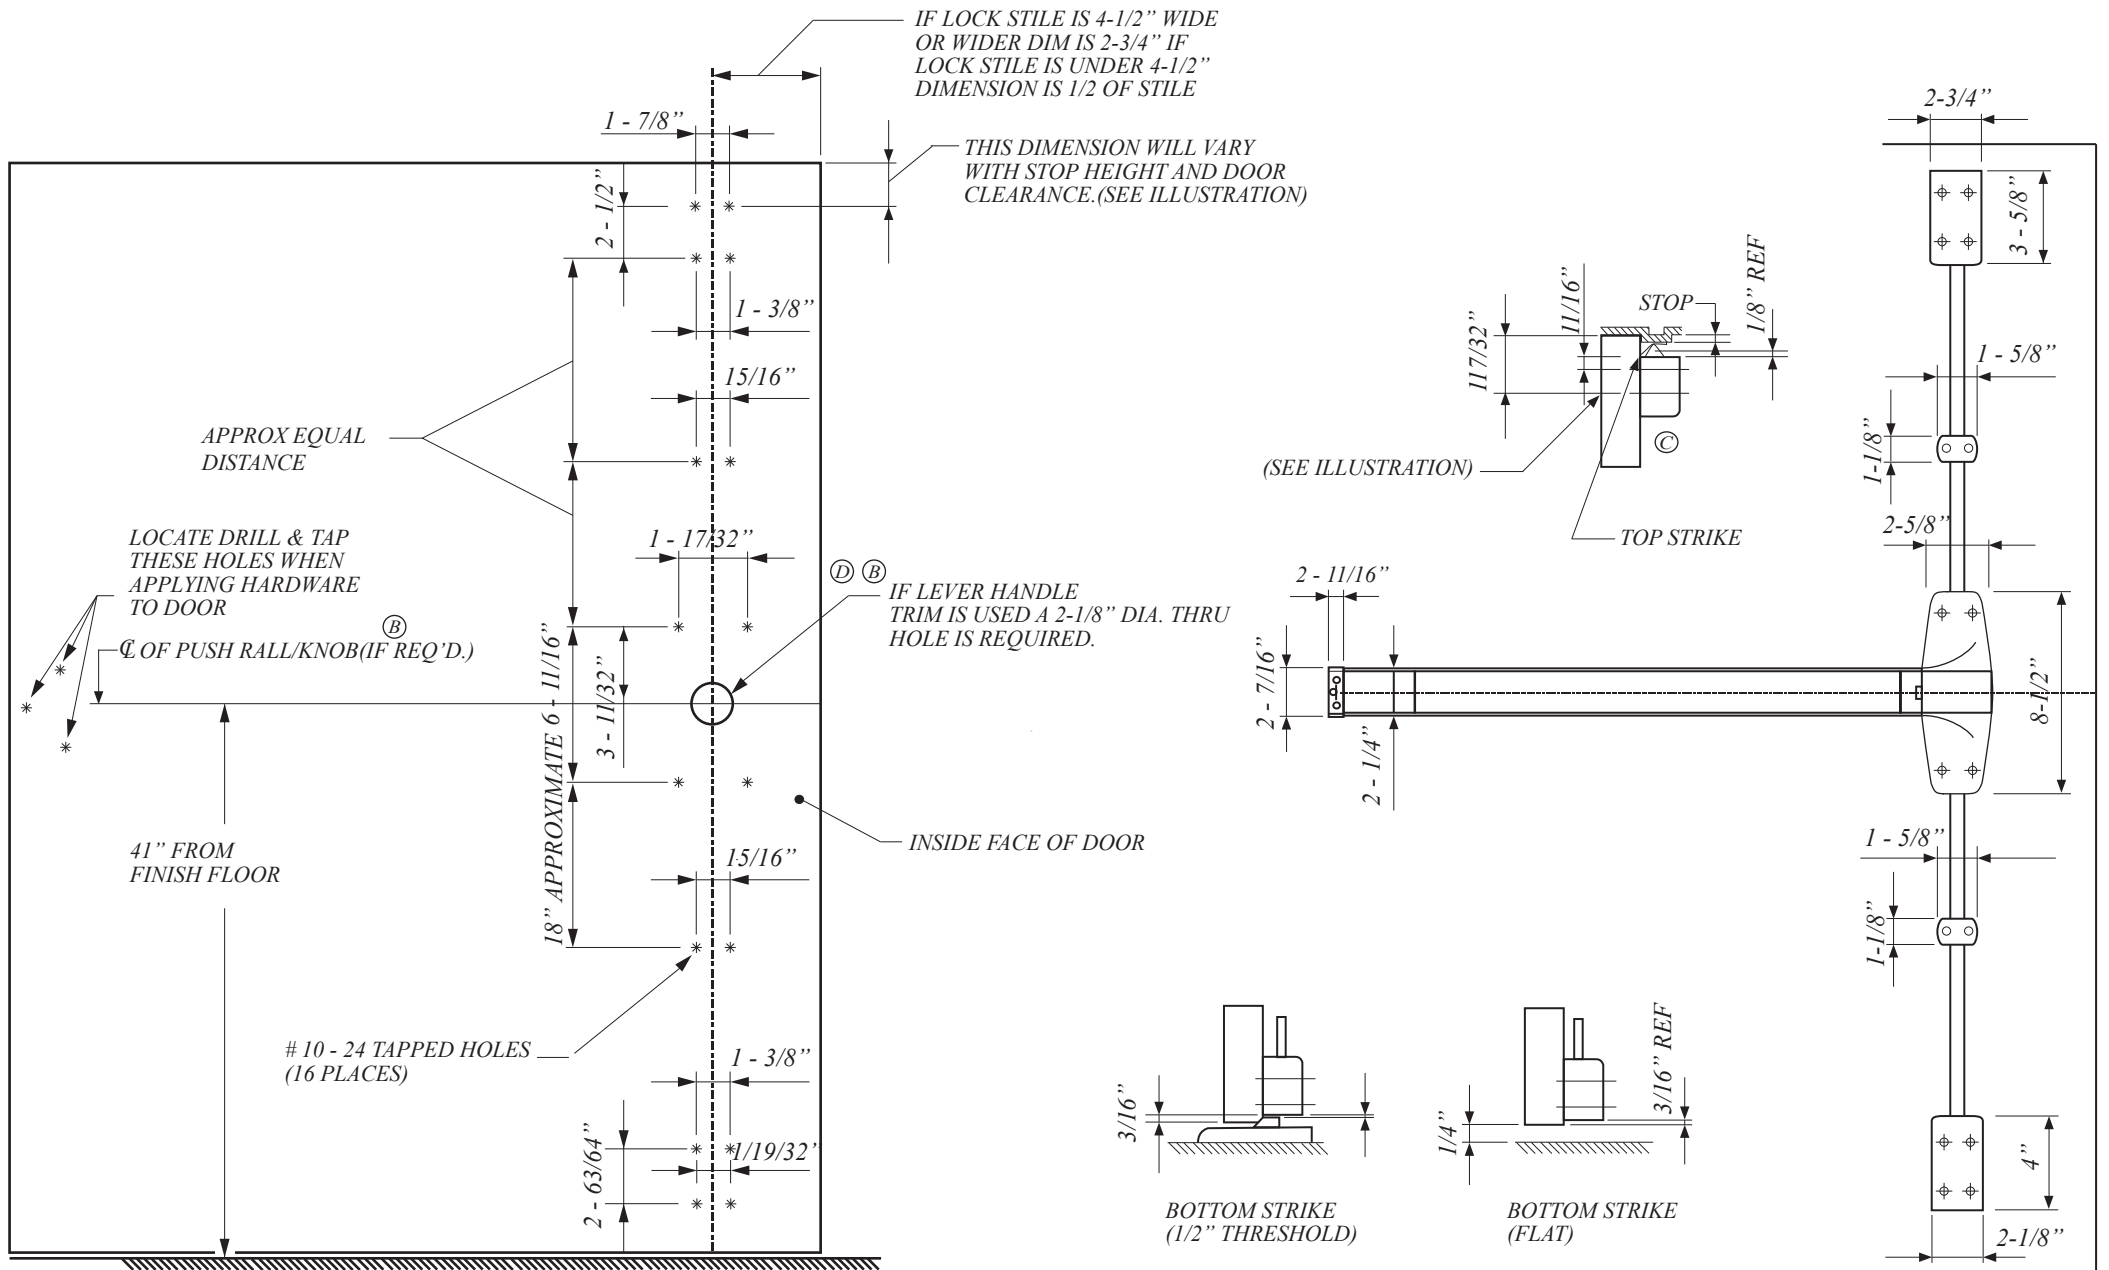

- 1.TOLERANCE ON ALL DIMENDIONS $\pm 1/64"$
- 2.WE RECOMMEND THAT ALL TAPPED HOLES BE DRILLED & TAPPED IN FIELD
- 3.SEE STRIKE TEMPLATE FOR(TOP), (BOTTOM) STRIKES.
- 4.SEE MASTER SHEET FOR AREAS REQUIRING REINFORCEMENTS
- 5.SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED MUST BE FLUSH

Lutér® Fire Command Panic Exit Device

TEMPLATE: PANIC VERTICAL ROD EXIT DEVICE	日期	10.11.3
	檔名	FC - 8600